


Installation Instructions for Mincey Marble Manufacturing's 15" Wall Mount Accessories Ledge Product Number: SS-05

DISCLAIMER MATERIALS & TOOLS INSTALLATION INSTRUCTIONS

DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the ledge detaches, physical injury to the occupant of the shower may occur. Mincey Marble will not be liable for any damages to persons or property because of incorrect installation.

These instructions have been written for Mincey Marble's SS-05 Cast Marble Wall Mount Accessories Ledge. If you have a different product than shown, please call us for instructions for the product you have purchased.

In preparation, before installing these accessories ledges, you will need to have completed the installation of the panel system and sealed the seams of the shower where the ledges are to be installed with 100% silicone.

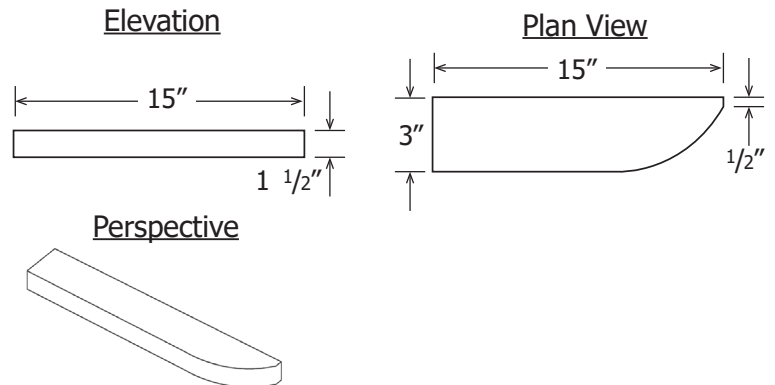

MATERIALS & TOOLS REQUIRED:


1. Drill, preferable corded, for required drilling
2. 3/16" Masonry Drill Bit
3. Measuring Tape
4. Pencil
5. 100% Silicone for marble to marble seams (color matched to the marble)
6. Clean, dry cloth for the accessories ledge and the wall
7. #2 Phillips Head Screwdriver to tighten the screws when attaching the Standoff Mounting Tubes
8. 2 - WingIt MAW35-SD fasteners and 2 - Standoff Tubes (provided by Mincey Marble)
9. A 3/4" Masonry Bit, for drilling holes for MAW35-SD Master WingIt

IMPORTANT NOTE: The accessories ledges will be pre-trimmed by Mincey Marble prior to shipping so that it will fit flush against the back wall. The ledges should be installed so that they butt up against the back shower panel. Both SS-05 ledges should be installed on the end wall opposite the shower head at the appropriate heights determined by the site plans.


INSTALLING THE ACCESSORIES LEDGE:

1. The installer should measure from the trimmed end of the ledge to the first hole and then mark the first hole that distance from the back wall, keeping the hole centered so that the ledge will be aligned with the band. Then, measure for the second hole and drill for the second hole accordingly.
2. Pre-drill the holes for the mounting hardware using the 3/16" masonry drill bit and the corded drill.
3. Insert an "L" shaped wire. Twirl the wire and make sure you do not hit an obstruction. If you hit a wall stud, you can move the hole location either forward or backward up to an inch and the ledge will still cover the other holes.
4. Assemble the mounting hardware as shown in Drawing (A).

Drawing (A): Standoff WingIt

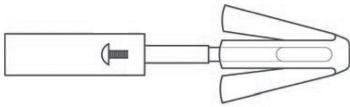

Drawing (B): Standoff WingIt

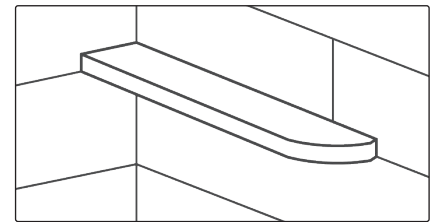

5. Install the WingIt Model #MAW35-SD as per instructions which accompany the WingIt's package. Make sure to tighten the screw securely, as this assembly will be what supports most of the weight of the ledge and anything that is placed on it.
6. Apply 100% silicone to the entire back of the ledge and into the hole that will receive the mounting hardware.
7. Carefully align the holes with the mounting hardware on the wall and slide the ledge onto the mounting hardware. Apply even pressure and make sure the back of the ledge is pressed completely against the wall.
8. Be sure to immediately clean up any silicone that may have squeezed out from behind the ledge. A clean, dry cloth should be all that is needed, but acetone or mineral spirits can be used on a rag to clean up excess silicone.
9. Once the ledge is securely in place, seal around the entire perimeter of the ledge to the wall with color matching 100% silicone. The accessories ledge should be allowed to remain in place for a minimum of 48 hours to allow the silicone to cure before weight is applied to the ledge. No weight should be applied to the ledge during this 48 hour period. If the ledge is used before the allotted 48 hours, all warranties will be void.

FOR INSTALLATION OF THE SECOND ACCESSORIES LEDGE, REPEAT THE ABOVE INSTALLATION INSTRUCTIONS, installing the ledges at the appropriate height as determined by the site plans.

DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the ledge detaches, physical injury to the occupant of the shower may occur. Mincey Marble will not be liable for any damages to persons or property because of incorrect installation.

If you have any questions, please call MINCEY MARBLE CUSTOMER SERVICE at 770-532-0451