



Installation Instructions for Mincey Marble Manufacturing's Chrome Plated Wall Mount Foot Rest

Product number: FR- 09

**Please read the following before attempting to install your new
chrome plated wall mount foot rest**

DISCLAIMER NOTICE: If the prescribed method of installation is not followed precisely, the foot rest may detach from the wall and cause damage to the panel system and the sheetrock wall. If the foot rest detaches, physical injury to the occupant of the shower may occur. Mincey Marble will not be liable for any damages to persons or property because of incorrect installation.

These instructions have been written for Mincey Marble's FR-09 chrome plated wall mount foot rest. If you have received a different product than shown, please contact our office so we can send proper instructions to you.

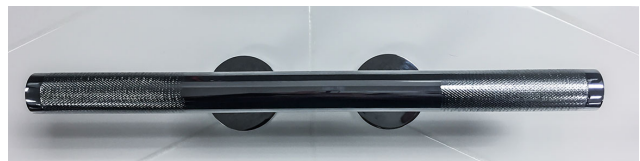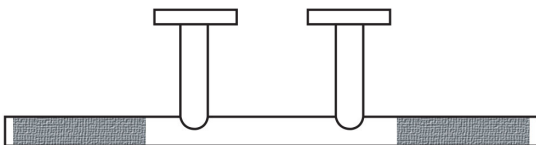

FR - 09

In preparation, before installing the foot rest, you will need to have completed the installation of the panel system and sealed the seams of the shower behind where the foot rest is to be installed with 100% silicone.

Tools and Materials required:

1. Torpedo level
2. Drill with 5/16" masonry drill bit
3. Stainless steel screws, mounting brackets, chrome plated bracket covers and an Allen wrench (packet included in each foot rest box)
4. #2 Phillips head screwdriver
5. Pencil
6. Measuring tape
7. Safety glasses


The FR-09 Chrome Plated Wall Mount Foot Rest **REQUIRES** blocking in the wall. If the wall you are getting ready to install this foot rest on does not have blocking behind it **DO NOT INSTALL** this foot rest.

PLEASE NOTE: *There should be a minimum 2 x 6 pressure treated wood blocking in the wall behind the substrate material in the shower enclosure, prior to the cast marble panels being installed. The blocking should be securely installed to the structural framework of the wall, should not have any free movement and the center of the block should measure 16" above finished floor, The foot rest will be centered 12" from the top of the curb of the shower pan on the "dry wall" (the wall opposite the shower head).*

Installing the chrome plated foot rest:

1. Determine the specified height of the foot rest and center it on the wall opposite the shower head. It will measure ~12" from the top of the shower pan curb. Also, make sure you are putting the foot rest on the right wall before starting the install. Failure to do this could cause unnecessary repair work, which can be time consuming and costly.
2. Once the height of the foot rest and the correct wall is determined, take the foot rest out of the box and measure the distance between the support arms. This will give you the drill location for the mounting brackets.
3. The foot rest comes assembled, so you will need to disassemble it to get the mounting brackets. There is an accessories packet included in the package. Take out the Allen wrench and remove the screws in each support arm. Please note: it is extremely important that you do not lose any pieces of the foot rest. There are no spares. Take one brass mount, Drawing A, place it in the proper place on the wall and make a pencil mark on the wall where the drill holes are located. Do the same with the second one. Use the level to make sure the marks for both drill holes are level.


Drawing A

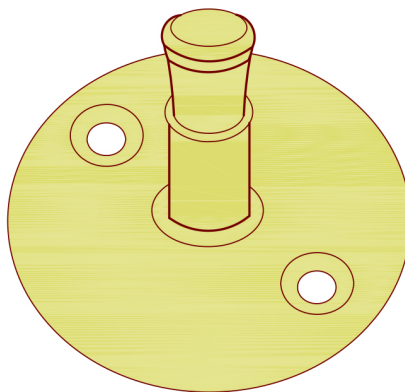

4. Using the drill, drill four holes into the cast marble panel system. Take the 4 stainless steel screws from the accessories packet and using the #2 Philips head screwdriver, mount the brackets to the wall and tighten the screws till snug. Do not over tighten.

5. Slide the chrome plates over the brackets, Drawing B. You can discard the blue rubber washers. They are not necessary.

Drawing B

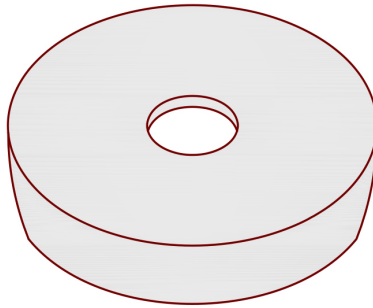

6. Place the foot rest on the mounting bracket, screw holes down, and using the Allen wrench, tighten the screws into place.

Failure to carefully follow these instructions could result in the mounting holes being drilled in the wrong locations, causing unnecessary repair work, extra time and expense to the installation.

If you have any questions, please call Mincey Marble Customer Service at 770.532.0451