



Mincey Marble Mfg., Inc.

1940 New Harvest Road

Gainesville, GA 30507

Ph: 800.533.1806

Fx: 770.531.0935

www.minceymarble.com

**Installation Instructions for Mincey Marble Manufacturing's
2" x 108" x 3/4" Extra - Long Trim Strips**


Product number: TR-05

**Please read the following before attempting to install your new cast
marble trim strips**

*These instructions have been written for Mincey Marble TR-05 - 2" x 108" x 3/4"
cast marble standard edge extra-long trim strips. These instructions will work for
model numbers TR-01 – TR-06. If you are using Mincey Marble TR-07 trim strips,
please contact our office at 800.533.1806 and request metal trim installation
instructions.*



TR-5

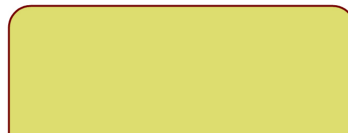

Tools /Materials Required:

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or
5. Framing square
6. 100% silicone for marble to marble seams (color matched for the marble), if necessary
7. Latex caulk for marble to drywall seams
8. Clean, dry cloths to clean trim and wipe caulking
9. Construction adhesive for adhering trim to the wall
10. Hot melt glue gun and glue sticks

Trim strips, as a rule, are manufactured up to 96"; however, there are times when you need longer trim. The TR-05 trim can be manufactured up to 108". As with all of our trim strips, the installer should plan to trim each piece to fit the area in which it will be installed. If the shower panels do not extend to the ceiling, the trim should be cut so that the top of the trim is the same height as the panels it will be installed next to.

This trim is designed to fit snug against the tub/shower enclosure. The panel system should stop flush with the edge of the tub/shower base. If not, the trim will need to be notched to fit tight against the panel, to avoid an unnecessarily large caulk joint between the panel and the trim.

Installing the 3/4" extra-long trim strips:

1. Measure the height of the area where the trim is to be installed. You may need to notch the trim around the base tile, if it is already set.
2. Cut the trim to fit. Sand the cut edges of the trim with 80 grit sandpaper to avoid cutting hands during installation and while caulking the trim.
3. Apply construction adhesive to the back of the trim and install the threshold. Note: you may want to use a small amount of hot melt glue to help hold the trim in place until the adhesive has time to set.
4. Caulk with appropriate color latex or acrylic caulk around the edges of trim, where marble meets drywall or painted or wallpapered walls. Use 100% silicone, color matched to match the marble on marble to marble and marble to tub/shower base seams.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806