



**Mincey Marble Mfg., Inc.**

1940 New Harvest Road

Gainesville, GA 30507

Ph: 770.532.0451


[www.minceymarble.com](http://www.minceymarble.com)

## **Installation Instructions for Mincey Marble Manufacturing's 2" x 96" x 1/2" Trim Strip**

**Product number: TR-01**

**Please read the following before attempting to install your new cast  
marble trim strips**

*These instructions have been written for Mincey Marble's TR-01- 2" x 96" x 1/2"  
cast marble double radius trim strips. These instructions will work for model  
numbers TR-01 – TR-06. If you are using Mincey Marble TR-07 trim strips, please  
contact our office at 770.532.0451 and request metal trim installation instructions.*

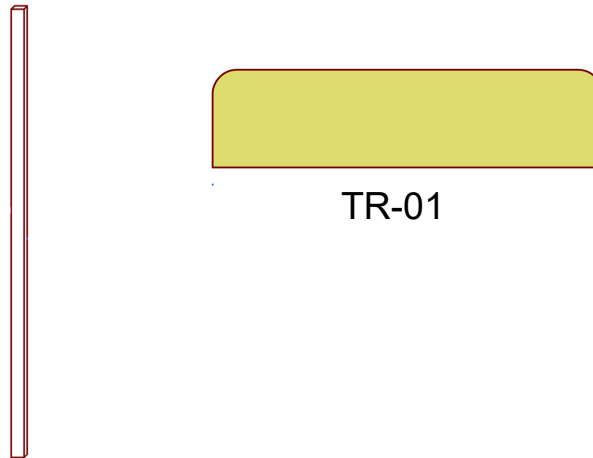

### **Tools /Materials Required:**

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or
5. Framing square
6. 100% silicone for marble to marble seams (color matched for the marble), if necessary
7. Latex caulk for marble to drywall seams
8. Clean, dry cloths to clean trim and wipe caulking
9. Construction adhesive for adhering trim to the wall
10. Hot melt glue gun and glue sticks

**Trim strips, as a rule, are manufactured up to 96". The installer should plan to trim each piece to fit the area in which it will be installed. If the shower panels do not extend to the ceiling, the trim should be cut so that the top of the trim is the same height as the panel it will be installed next to. If you require trim longer than 96", it should be ordered in separate pieces and will have to be seamed when installed to reach lengths of longer than 96".**

**This trim is designed to fit snug against the tub/shower enclosure. The panel system should stop flush with the edge of the tub/shower base. If not, the trim will need to be notched to fit tight against the panel, to avoid an unnecessarily large caulk joint between the panel and the trim.**

### **Installing the 1/2" thick double radius trim strips:**

1. Measure the height of the area where the trim is to be installed. You may need to notch the trim around the base tile, if it is already set.
2. Cut the trim to fit. Sand the cut edges of the trim with 80 grit sandpaper to avoid cutting hands during installation and while caulking the trim.
3. Apply construction adhesive to the back of the trim and install the threshold. Note: you may want to use a small amount of hot melt glue to help hold the trim in place until the adhesive has time to set.
4. Caulk with appropriate color latex or acrylic caulk around the edges of trim, where marble meets drywall or painted or wallpapered walls. Use 100% silicone, color matched, to match the marble on marble to marble and marble to tub/shower base seams.

**If you have any questions, please call Mincey Marble Customer Service at 770.532.0451**