


- All panels are made oversized and must be measured and cut to fit on site.
- Uses include, but are not limited to, Tub & Shower Surrounds.
- Accessory and color options are available at <u>www.minceymarble.com</u>.

NOTE:

Due to site conditions, walls are never true and plumb. Therefore it is impossible to match the angled grout lines. We strongly recommend exaggerating the off-set grout lines in the corner conditions for design aesthetic purposes. See detail on left.

Please ensure you refer to specific instructions located within the installation instructions provided by your Mincey project manager / contact for cutting panels to fit while considering the corner conditions.

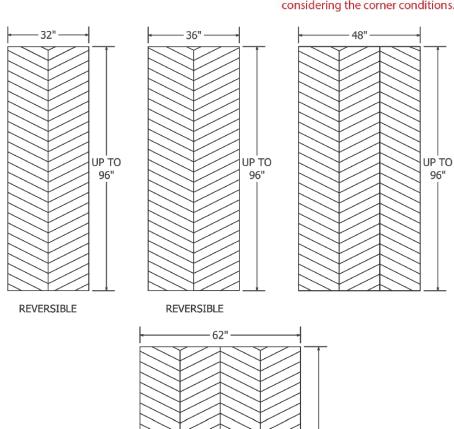

Revision: 3/2023

UP TO 96"