



Mincey Marble Mfg., Inc.

4321 Browns Bridge Road

Gainesville, GA 30504


Ph: 800.533.1806

Fx: 770.531.0935

www.minceymarble.com

Installation Instructions for Mincey Marble Manufacturing's

2" X 96" X 1 ¼" Trim Strip

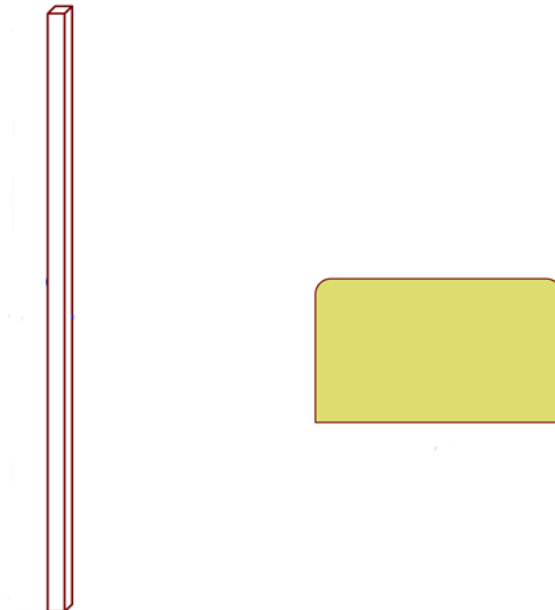

Product number: #TR-04

These instructions have been written for Mincey Marble TR-04 - 2" x 96" x 1 ¼" cast marble standard edge extra thick trim strips. These instructions will be the same for all Mincey Marble trim strips.

NOTE: This trim is generally used when the marble surrounds are being applied on top of existing tile or other surrounds material, to cover the gap left by applying the marble over existing material.

Tools /Materials Required:

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or
5. Framing square
6. 100% silicone for marble to marble seams (color matched for the marble), if necessary
7. Latex caulk for marble to drywall seams
8. Clean, dry cloths to clean trim and wipe caulking
9. Construction adhesive for adhering trim to the wall
10. Hot melt glue gun and glue sticks

Trim strips, as a rule, are manufactured up to 96". The installer should plan to trim each piece to fit the area in which it will be installed. If the shower panels do not extend to the ceiling, the trim should be cut so that the top of the trim is the same height as the surrounds it will be installed next to. If you require trim longer than 96", it should be ordered in separate pieces and will have to be seamed when installed to reach lengths of longer than 96".

This trim is designed to fit against the tub/shower enclosure. The surrounds should stop flush with the edge of the tub/shower base. If not, the trim will need to be notched to fit tight against the surrounds, to avoid an unnecessarily large caulk joint between the panel and the trim.

Installing your 1 ¼" standard edge extra thick trim strips:

1. Measure the height of the area where the trim is to be installed. You may need to notch the trim around the base tile, if it is already set.
2. Cut the trim to fit. Sand the cut edges of the trim with 80 grit sandpaper to avoid cutting hands during installation and while caulking the trim.
3. Apply construction adhesive to the back of the trim and install the threshold. Note: you may want to use a small amount of hot melt glue to help hold the trim in place until the adhesive has time to set.
4. Caulk with appropriate color latex or acrylic caulk around the edges of trim, where marble meets drywall or painted or wallpapered walls. Use 100% silicone, color matched to match the marble on marble to marble and marble to tub/shower base seams.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.