



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road

Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**Ceramic Gloss Corner Mount Soap  
Dishes**




**Product number: SD- 07**

**SD- 07**

**Please read the following before attempting to install your new  
ceramic gloss corner mount soapdishes.**

***These instructions have been written for Mincey Marble's SD-07 ceramic gloss corner  
mount soapdish. If you have a different product than shown, please call us for  
instructions for the product you have purchased.***

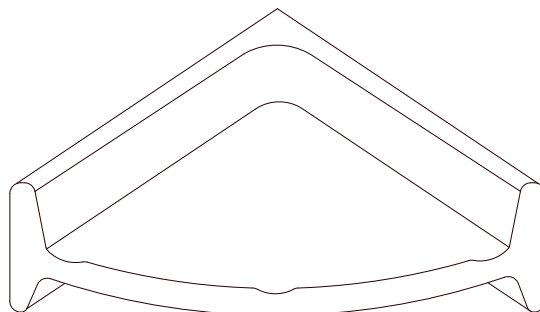

**In preparation, before installing these soap dishes, you will need to have completed the installation of the surrounds and sealed the seams of the shower surrounds behind where the soap dish is to be installed with 100% silicone.**

### **Tools and Materials required:**

1. Torpedo level
2. Silicone (100%) and caulk gun
3. Hot melt glue and hot melt glue gun
4. Acetone\*
5. Pencil

**Two types of adhesive are needed to install the soap dishes because they serve different purposes. The hot melt glue bonds immediately, but will not hold the soap dish for more than a few days. The silicone takes a few hours to cure, but after curing, it will secure the soap dish indefinitely.**

### **Installing the ceramic corner mount soap dishes:**

After determining the location of the soap dish, use the acetone to thoroughly clean the back of the soap dish and the wall where the soap dish is to be installed. Hold the soap dish up against the wall in the area to be installed. Check the level of the soap dish with the torpedo level. Adjust the soap dish as necessary to get the flat part of the soap dish level. Mark along the edge of the soap dish with your pencil on the wall. This will give you a reference line to use to keep the soap dish level while being glued to the wall.

Apply silicone to the cleaned back of the soap dish. Only a small “daub” of silicone is necessary. Place the silicone toward the outer edges of the soap dish. Apply a small amount of hot melt glue in the middle of the back of the soap dish. It is important that the two different adhesives do not mix, because they do not work well together when mixed. Once the hot melt glue has been applied, the soap dish needs to be installed immediately. Otherwise, the hot melt glue will cool. If that happens, scrape the hot melt glue off and reapply.

Any excess silicone and hot melt glue can be cleaned up after installation. The earlier it is cleaned, the easier it is to remove. Also, using a clean cloth rag and acetone, clean up the pencil lines from the panel.

**\* Please use acetone only. Denatured alcohol or other water-based cleaners are not acceptable. If you do not have acetone, wiping with a clean, dry rag is an acceptable alternative.**

Mincey Marble Manufacturing recommends using a high temperature hot melt glue stick when attaching our cast marble or ceramic soap dishes to our surrounds. The company we purchase our glue sticks from is AIM Supply and the part number is BO 6390-15. This is a 1/2" x 15" Adhesive Glue Stick. If your installer wants to use glue sticks from Home Depot or Lowe's, we recommend the Arrow Fastener's 4" Super Strong Glue Stick, however, these may not be available at all Lowe's or Home Depot store locations.

As a precaution - **DO NOT USE ALL PURPOSE GLUE STICKS**. They do not hold the weight of the soapdishes as well.

If you decide to purchase your glue sticks from AIM Supply you can contact them direct toll free at 800.999.0125 or on the web at [www.aimsupply.com](http://www.aimsupply.com). They will accept orders 24/7, either on line or by phone.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.