



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road

Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**Corner Mount Shampoo Shelf**


**Product number: SS-01**



**SS-01**

**Please read the following before attempting to install the corner mount shampoo shelf.**

*These instructions have been written for the Mincey Marble corner mount shampoo shelf. If you have a different product than shown, please call us for instructions for the product you have purchased.*

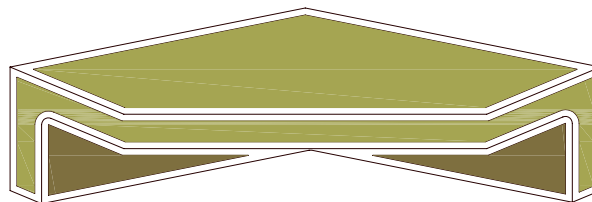

## Materials and Tools required:

1. Torpedo level
2. Pencil
3. Silicone (100%) and caulk gun
4. Hot melt glue and hot melt glue gun
5. Clean, dry rags
6. Acetone\*

Two types of adhesive are needed to install the soap dishes because they serve different purposes. The hot melt glue bonds immediately, but will not hold the soap dish for more than a few days. The silicone takes a few hours to cure, but after curing, it will secure the soap dish indefinitely.

*\* Please use acetone only. Denatured alcohol or other water-based cleaners are not acceptable. If you do not have acetone, wiping with a clean, dry rag is an acceptable alternative.*

**NOTE: The shampoo shelf should be located in the corner of the shower, adjacent to the showerhead and strategically located 48" above the shower floor. It has to be installed with the flat surface facing up. The integral mounting bracket will be on the underside of the shelf when installed.**

## To install the shampoo shelf:

1. Clean the back of the shampoo shelf and the wall with acetone before proceeding
2. Measure from the floor 48" up on the shower panels; make a mark at this height. This will be the height to the top of the shampoo shelf.
3. Using the torpedo level, lightly make a level line to the corner, going onto the adjacent wall with the mark.
4. Apply silicone to the back of the integral mounting bracket of the support shelf. It is helpful to use a small amount of hot melt glue on each side also, to help keep the support in place during installation.
5. Quickly, before the hot melt glue cools, apply the shelf to the wall.
6. Use 100% silicone, color matched for the marble, to seal around the shelf once installation is complete.
7. Clean with clean, dry rags.

**Mincey Marble Manufacturing recommends using a high temperature hot melt glue stick when attaching our cast marble or ceramic soap dishes to our surrounds. The company we purchase our glue sticks from is AIM Supply and the part number is BO 6390-15. This is a ½" x 15" Adhesive Glue Stick. If your installer wants to use glue sticks from Home Depot or Lowe's, we recommend the Arrow Fastener's 4" Super Strong Glue Stick, however, these may not be available at all Lowe's or Home Depot store locations.**

As a precaution - **DO NOT USE ALL PURPOSE GLUE STICKS**. They do not hold the weight of the soapdishes as well.

If you decide to purchase your glue sticks from AIM Supply you can contact them direct toll free at 800.999.0125 or on the web at [www.aimsupply.com](http://www.aimsupply.com). They will accept orders 24/7, either on line or by phone.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.