



Mincey Marble Mfg., Inc.

4321 Browns Bridge Road

Gainesville, GA 30504


Ph: 800.533.1806

Fx: 770.531.0935

www.minceymarble.com

Installation Instructions for Mincey Marble Manufacturing's

2" x 96" x 3/4" Double Bevel Trim Strips

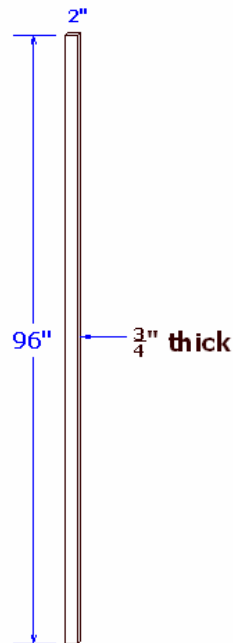

Product number: TR-03

These instructions have been written for Mincey Marble's TR-03 - 2" x 96" x 3/4" double bevel edge trim strips. These instructions shall be the same for all models of trim, except for TR-04. If you have ordered TR-04 trim, please call us for instructions for that particular product.

Tools /Materials Required:

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or
5. Framing square
6. 100% silicone for marble to marble seams (color matched for the marble), if necessary
7. Latex caulk for marble to drywall seams
8. Clean, dry cloths to clean trim and wipe caulking
9. Construction adhesive for adhering trim to the wall
10. Hot melt glue gun and glue sticks

Trim is manufactured to required dimensions when ordered, however, you will want to order the trim a little longer than necessary, if possible and cut to fit. They may require trimming to fit the trim area.

This trim is designed to fit against the tub/shower enclosure. The surrounds should stop flush with the edge of the tub/shower base. If not, the trim will need to be notched to fit tight against the surrounds, to avoid an unnecessarily large caulk joint between the panel and the trim.

To install the trim:

1. Measure the height of the area where the trim is to be installed. You may need to notch the trim around the base tile, if it is already set.
2. Cut the trim to fit. Sand the cut edges of the trim with 80 grit sandpaper to avoid cutting hands during installation and while caulking the trim.
3. Apply construction adhesive to the back of the trim and install the threshold. Note: you may want to use a small amount of hot melt glue to help hold the trim in place until the adhesive has time to set.
4. Caulk with appropriate color latex or acrylic caulk around the edges of trim, where marble meets drywall or painted or wallpapered walls. Use 100% silicone, color matched to match the marble on marble to marble and marble to tub/shower base seams.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.