



Mincey Marble Mfg., Inc.

4321 Browns Bridge Road

Gainesville, GA 30504


Ph: 800.533.1806

Fx: 770.531.0935

www.minceymarble.com

Installation Instructions for Mincey Marble Manufacturing's


Standard Windowsill with Separate 1" Apron

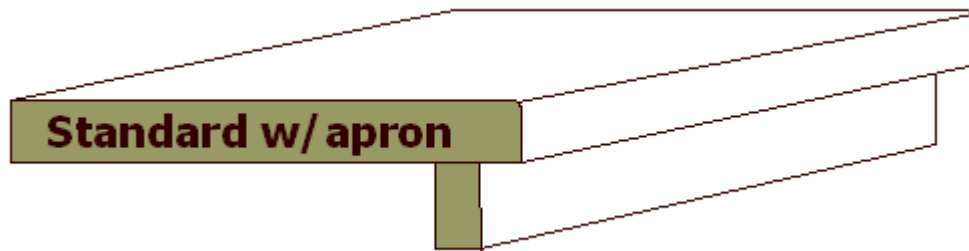

Product number: WS1APR

Please read the following before attempting to install WA1APR windowsills with 1" separate aprons.

These instructions have been written for standard windowsills with separate 1" aprons. If you have a different windowsill material, please call for the appropriate instructions.

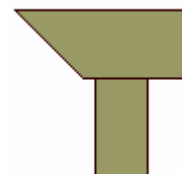


Tools /Materials Required:

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or Framing square
5. 100% silicone for marble to marble seams (color matched for the marble), if necessary
6. Latex caulk for marble to drywall seams
7. Clean, dry cloths to clean sills and wipe caulking
8. Construction adhesive for adhering apron to drywall
9. Hot melt glue gun and glue sticks

Windowsill aprons are generally manufactured to required dimensions. These aprons are usually cut to sizes ordered. They may require trimming to fit the sill area. The aprons are installed butted to the bottom of the windowsill material, after the windowsill is installed. If your window sill apron material is ordered exceeding the maximum length of the produced materials, they will need to be installed in separate pieces, explained in the section below the standard installation instructions. The maximum length of this windowsill material is 120". The depth is a variable of 3 ½", 4, 5, 6, 6 ½, 7, 8, 10, 14, 15 & 16".

To install the windowsill apron:

1. Measure the windowsill length.
2. Cut the apron to fit, if necessary. The apron should be the same length as the windowsill. If it is necessary to cut, it is best to cut each end of the apron. Sand cut edges with 80 grit sandpaper, to keep from cutting hands while handling and while caulking the sill.
3. Apply construction adhesive to the back of the apron. Apply a few daubs of hot melt glue to the back of the apron. Install the apron, butting it to the bottom of the windowsill.
4. Caulk with appropriate color latex or acrylic caulk around the edges of apron.

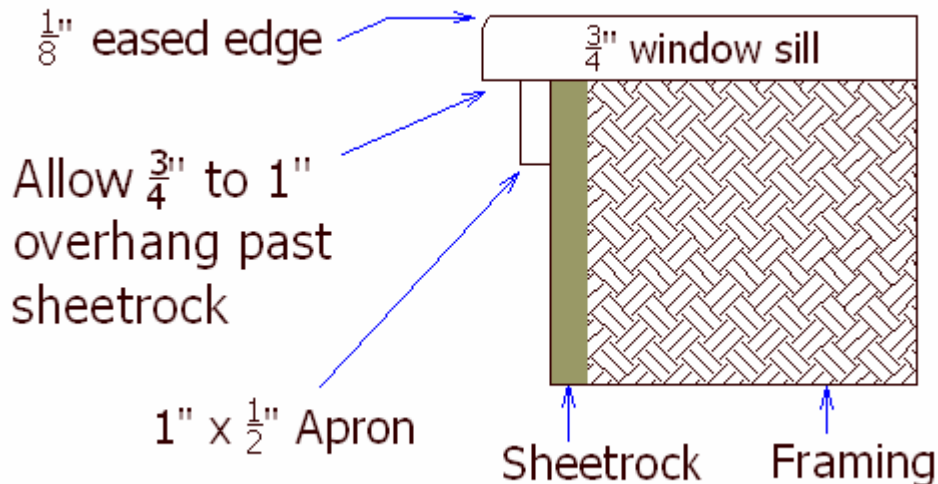

To install two-piece or multi-piece windowsill aprons:

1. These pieces will need to be seamed together. For the best fit and look, it is best to have these split into equal sizes for each piece. They will butt together. It is best to cut each side that will butt up to the adjacent piece. These seams will be caulked with a closely matching silicone, for the best finish.
2. All of the other installation procedures will be the same as above.

NOTE: Mincey Marble does not recommend piecing windowsills due to variations in thickness. Whenever possible, sills should be made in one piece. If it is necessary to piece sills, the installer may need to use shims to adjust pieces for best look.

Call Mincey Marble at 800-533-1806 with any questions.