



Mincey Marble Mfg., Inc.

4321 Browns Bridge Road

Gainesville, GA 30504


Ph: 800.533.1806

Fx: 770.531.0935

www.minceymarble.com

Installation Instructions for Mincey Marble Manufacturing's

Windowsill with 1 1/4" Integral Front Edge

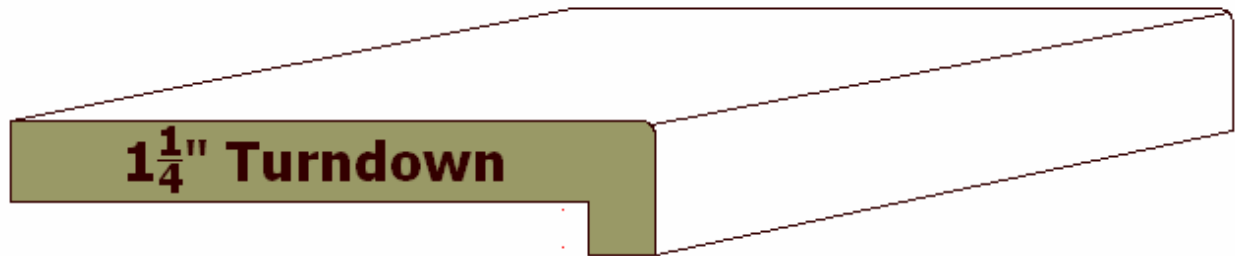

Product number: WS-DD

Please read the following before attempting to install windowsills.

These instructions have been written for windowsills with 1 1/4" integral front edges. If you have a different windowsill material, please call for the appropriate instructions. If you have windowsills with a separate apron, please see separate instructions for these aprons.




Tools /Materials Required:

1. Circular saw with a masonry blade
2. Measuring tape
3. Pencil
4. Speed Square or Framing square
5. 100% silicone for marble to marble seams (color matched for the marble), if necessary
6. Latex caulk for marble to drywall seams
7. Clean, dry cloths to clean sills and wipe caulking
8. Construction adhesive for adhering sill to drywall

Windowsills are generally manufactured to required dimensions. They may require trimming to fit the sill area. Your sill material should have been ordered so that the integral apron butts up against the finished sheet rock. If the windowsill is in excess of the maximum length of the sill material, it will need to be installed in more than one piece. See instructions for this below the standardized instructions below. The maximum length of this windowsill material is 120". The depth of the windowsill is up to 20".

To install the windowsill:

1. Measure the opening of the sill.
2. Cut the sill to fit, if necessary. If it is necessary to cut, it is best to cut each end of the sill. If the sill has been ordered long enough, you may be able to notch each end of the sill for a better look, upon installation. Otherwise, cut each end square.
3. Sand cut edges with 80 grit sandpaper, to keep from cutting hands while handling and while caulking the sill.
4. Apply construction adhesive to the sill area and install the sill.
5. Caulk with appropriate color latex or acrylic caulk around the edges of sill.

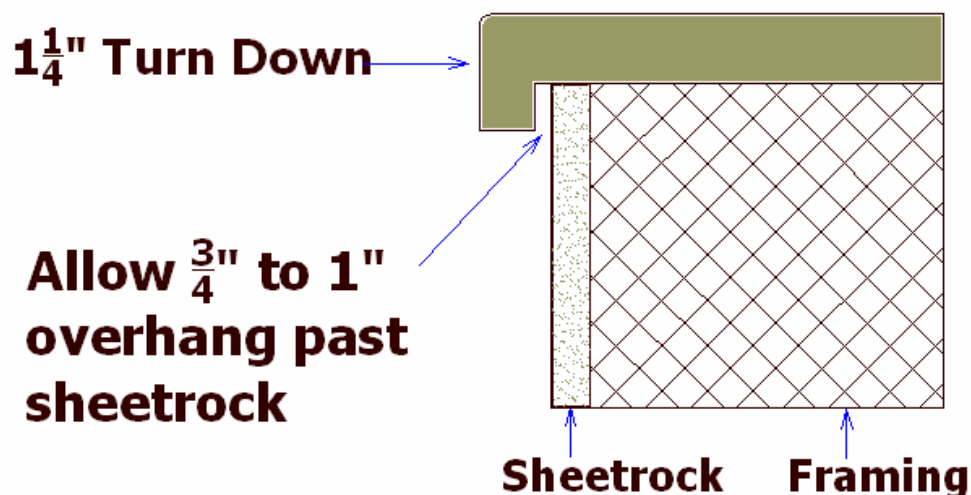

To install two-piece or multi-piece windowsills:

1. These pieces will need to be seamed together. For the best fit and look, it is best to have these split into equal sizes for each piece. They will butt together. It is best to cut each side that will butt up to the adjacent piece. These seams will be caulked with a closely matching silicone, for the best finish.
2. All of the other installation procedures will be the same as above.

NOTE: Mincey Marble does not recommend piecing windowsills due to variations in thickness. Whenever possible, sills should be made in one piece. If it is necessary to piece sills, the installer may need to use shims to adjust pieces for best look.

Call Mincey Marble at 800-533-1806 with any questions.