



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road

Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**Curved Banjo Vanity Top**


**Product number: BT-14**



**BT-14**

**Please read the following before attempting to install your cast marble vanity top.**

*These instructions have been written for Mincey Marble's BT-14 cast marble Curved Banjo Vanity Top. If you have a product that is different than the style shown below, please call us for instructions for the product you have purchased,*

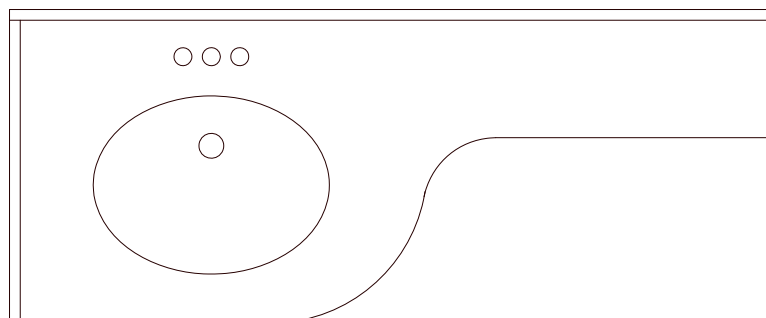

**INSTALLERS NOTE:** These instructions are for general use only. Check plans and local codes for exact specs.

### **Tools/ Materials Required:**

1. Circular saw with masonry blade
2. Circular saw with wood cutting blade
3. Measuring tape
4. Pencil
5. 4' level
6. Construction adhesive
7. Wood screws (both 2" and 3" for securing framework to framework and securing framework to walls)
8. 100% silicone for marble to marble seams (color matched for the marble)
9. Latex caulk for marble to drywall seams
10. Framing square
11. 2x4 lumber for framing
12. 5/16" Nut driver or Flat head screwdriver
13. Dry clean rags for cleaning top and wiping caulk

### **Instructions for framework installation for wall to wall tops**

Mark a level line for height of framework on walls (average height is 33"). Handicap will differ. On the back wall, secure a length 2x4 full length of opening by using glue and screwing to studs. Next secure a length of 2x4 to left and right walls in same manner as above. Keep these 2x4s at least one inch shorter than the depth of the top so that the frame does not run into the apron or extend past the edge of the top on the arm end. Since the apron is integral, you will not need to build a framework for it.

### **Instructions for Top Installation**

\*If using an under mount bowl, mount it now by running a bead of silicone around bowl then center it to give equal overhang around cut-out then with the mounting hardware secure bowl onto top. **Hand-tighten** only so as not to drive the screw thru the top.

After the framework is installed, cut the marble top to fit walls\* and place onto framework. **Do not cut off the arm end of the top, if it is to be open on that end.**

**Note: walls may be out of square, so cut top to fit (maximum tolerance is 1/4").** With this vanity top, it is more secure to glue the top to the framework with adhesive, to help support the top. Next, glue end splashes to walls by applying three dabs of caulking to back of splash and press into place. Caulk the seams where marble touches marble with matching 100% silicone. Use Latex caulk to caulk the seams around the top that touch drywall. Cover top to protect from damage.

\*Check specifications for proper sealants. We suggest 100% silicone

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.**