



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road

Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**40" Curved Front Vanity Top**


**Product number: CT-19**



**CT-19**

**Please read the following before attempting to install your cast marble vanity top:**

*These instructions have been written for Mincey Marble's CT- 19 40" Curved Front cast marble vanity top with integral apron. If you have a product that is different than the style shown below, please call us for instructions for the product you have purchased.*

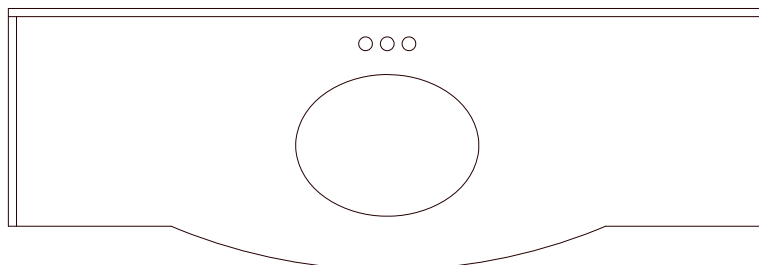

**INSTALLERS NOTE:** These instructions are for general use only. Check plans and local codes for exact specs.

### **Tools/ Materials Required:**

1. Circular saw with masonry blade
2. Circular saw with wood cutting blade
3. Measuring tape
4. Pencil
5. 4' level
6. Construction adhesive
7. Wood screws (both 2" and 3" for securing framework to framework and securing framework to walls)
8. 100% silicone for marble to marble seams (color matched for the marble)
9. Latex caulk for marble to drywall seams
10. Framing square
11. 2 x 4 lumber for framing
12. 5/16" Nut driver or Flat head screwdriver
13. Dry clean rags for cleaning top and wiping caulk

### **Instructions for framework installation for wall to wall tops**

Mark a level line for height of framework on walls (average height is 33"). Handicap will differ. On the back wall, secure a length of 2 X 4 full length of opening by using glue and screwing to studs. Next secure a length OF 2 X 4 to left and right walls in same manner as above, Leaving the framing about 1" short of the back of the apron.

**Note:** If you are using a tissue cut out, you can glue the dispenser onto the back side of the apron, using silicone and hot melt glue.

### **Instructions for Top Installation**

\*If using an under mount bowl, mount it now by running a bead of silicone around bowl then center it to give equal overhang around cut-out then with the mounting hardware secure bowl onto top. **Hand- tighten** only so as not to drive the screw thru the top.

After the framework is installed, cut the marble top to fit walls\* and place onto framework. **Note:** **walls may be out of square, so cut top to fit (maximum tolerance is 1/4")**. The best way to install the top is to go flat into the opening, as the integral apron will not allow you to angle the top to place in the opening. Next, glue end splashes to walls by applying three dabs of caulking to back of splash and press into place. Clean the top and apron, then caulk\* into place. Cover top to protect from damage.

\*Check specifications for proper sealants we suggest 100% silicone

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.**