



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road

Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**Curved Corner Vanity Top**


**Product number: CT-18**



**CT-18**

**Please read the following before attempting to install your cast marble vanity top.**

*These instructions have been written for Mincey Marble's CT-18 Curved Corner cast marble vanity top with integral apron, integral back and side splash. If you have a product that is different than the style shown below, please call us for instructions for the product you have purchased,*

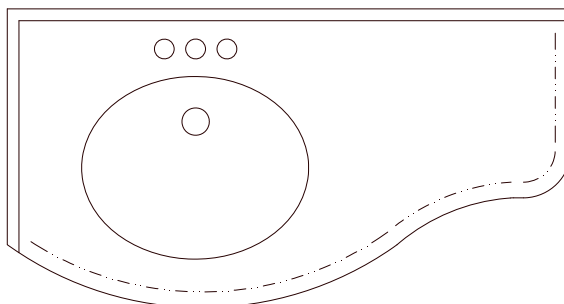

**INSTALLERS NOTE:** These instructions are for general use only. Check plans and local codes for exact specs.

### **Tools/ Materials Required:**

1. Circular saw with wood cutting blade
2. Measuring tape
3. Pencil
4. 4' level
5. Construction adhesive
6. Wood screws (both 2" and 3" for securing framework to framework and securing framework to walls)
7. 100% silicone for marble to marble seams (color matched for the marble)
8. Latex caulk for marble to drywall seams
9. Framing square
10. 2x4 lumber for framing
11. 5/16" Nut driver or Flat head screwdriver
12. Dry clean rags for cleaning top and wiping caulk

### **Installation Instructions for framework**

Mark a level line for height of framework on walls (average height is 33"). Handicap will differ. On the back wall, secure a length of 2 X 4 full length of vanity top, about 1" short of the back side of the apron by using glue and screwing to studs. Next secure a length of 2 x 4 to left or right walls in same manner as above. This will depend on which side the top will attach to.

### **Instructions for Top Installation**

\*If using an under mount bowl, mount it now by running a bead of silicone around bowl then center it to give equal overhang around cut-out then with the mounting hardware secure bowl onto top. **Hand-tighten** only so as not to drive the screw thru the top.

After the framework is installed, place adhesive on top of the framework and place the top onto the frame. A 1 x 4 may be used to prop up the overhanging corner of the top to help keep it in place until the adhesive has dried.

**Note:** *walls may be out of square, so the back of the cove can be ground with a belt sander or disc sander to fit better. Do not grind more than 3/16" from the cove.* Clean the top and apron, then caulk\* into place. Cover top to protect from damage.

\*Check specifications for proper sealants. We suggest 100% silicone

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.**