


**Installation Instructions for Mincey Marble Manufacturing's
5/16" x 96" x 7/8" Metal Trim Strip**

Product number: #TR-07

**Please read the following before attempting to install your new
Metal trim strips**

These instructions have been written for Mincey Marble's TR- 07 – 5/16" x 96" x 7/8" metal trim strips. These trim strips can be used with any Mincey Marble panel system but cannot be installed the same as the cast marble trim strips.

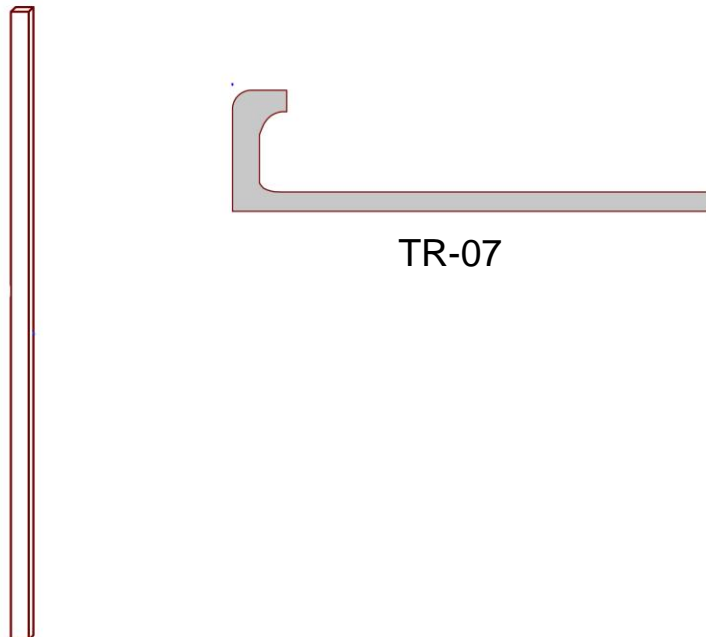

Tools /Materials Required:

1. Measuring tape
2. Pencil
3. Hack Saw
4. Silicone
5. Clean, dry cloths to clean trim and wipe silicone

Metal trim strips, as a rule, will be supplied at 96". The installer should plan to trim each piece to fit the area in which it will be installed. If the shower panels do not extend to the ceiling, the trim should be cut so that the top of the trim is the same height as the panels it will be mounted on.

Installing the Metal trim strips:

1. Measure the height of the area where the trim is to be installed.
2. Cut the trim to fit. File the cut edges if necessary.
3. Apply silicone to the back of the trim strip and press into place.

If you have any questions, please call Mincey Marble Customer Service at 800.533.1806