



**Mincey Marble Mfg., Inc.**

4321 Browns Bridge Road  
Gainesville, GA 30504

Ph: 800.533.1806

Fx: 770.531.0935

[www.minceymarble.com](http://www.minceymarble.com)

**Installation Instructions for Mincey Marble Manufacturing's**

**Standard Rectangle Vanity Top  
with Apron and cut-outs**


**Product number: VT- 02**



**VT-02 with TPD and FTD**

**Please read the following before attempting to install your cast marble vanity top.**

*These instructions have been written for Mincey Marble's VT-02 Standard Rectangular cast marble vanity top with separate apron. Apron can be cut to include facial tissue dispenser and toilet tissue dispenser. If you have a product that is different than the style shown below, please call us for instructions for the product you have purchased.*

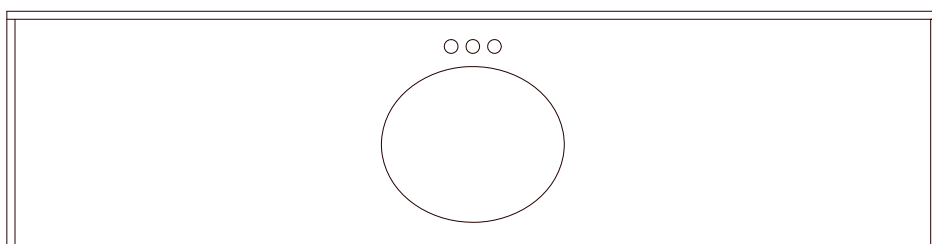

**INSTALLERS NOTE:** These instructions are for general use only. Check plans and local codes for exact specs.

### **Tools/Materials Required:**

1. Circular saw with masonry blade
2. Circular saw with wood cutting blade
3. Cordless screwdriver or drill
4. Jig saw
5. Measuring tape
6. Pencil
7. 4' Level
8. Construction Adhesive
9. Wood screws (both 2" and 3" for securing framework to framework and securing framework to walls)
10. 100% silicone for marble to marble seams (color matched for the marble)
11. Latex caulk for marble to drywall seams
12. Spring clamps or C-clamps
13. Framing Square
14. ½" plywood
15. ¾" plywood
16. 5/16" Nut driver or flat head screwdriver
17. Dry clean rags for cleaning top and wiping caulk
18. Hot melt glue gun and glue

### **Instructions for framework installation for wall to wall tops, with a 22" depth, with a separate cultured marble apron**

Mark a level line for height of framework on walls (average height is 33"). Handicap will differ. Note: The VT-02 will not come with cut-outs for facial tissue or toilet tissue dispensers. On the back wall, secure a length of ½" plywood 6 ½" tall and full length of opening by using glue and screwing to studs. Next secure a length of ¾" plywood (6 ½" x 20") to left and right walls in same manner as above. Now, secure a length of ½" plywood for the front support with glue and screws. **Note: If you are using a facial tissue cut out, you must cut the hole in the plywood for the tissue cut before installing the plywood. Also note, plywood is not optional.** It serves as a support for the top as well as marble apron. To determine the height of this plywood, you must first check the height of marble apron and subtract ½". (This should be height of plywood) The tissue cut out will be on the opposite side of the bowl.

### **Instructions for framework installation for wall to wall tops, with a 24" depth, with a separate cultured marble apron**

These instructions are generally the same as the 22" depth tops, except the framework will be different dimensions. The back wall is the same as above. The left and right walls will still use ¾" plywood, but the boards should be cut 6 ½" x 22". The same instructions as above should be followed to install the ½" plywood for the front support.

## Instructions for Top Installation

\*If using an under mount bowl, mount it now by running a bead of silicone around bowl then center it to give equal overhang around cut-out then with the mounting hardware secure bowl onto top. **Hand-tighten** only so as not to drive the screw thru the top.

After the framework is installed, cut the marble top to fit walls\* and place onto framework. Note walls may be out of square, so cut top to fit (maximum tolerance is 1/4"). Next, glue end splashes to walls by applying three dabs of caulking to back of splash and press into place. If a marble top is getting a separate marble apron, and if apron has a tissue cut out, now you should install the tissue can into the wood framework. Cut the marble apron to fit and glue onto plywood. You will need to clamp **lightly** until glue has set. **Note:** You can use hot melt glue (in addition to adhesive) to help speed up this process. Clean the top and apron, then caulk\* into place, with either a latex caulk or approved sealant. Cover top to protect from damage.

\*Check specifications for proper sealants. We suggest 100% silicone

**If you have any questions, please call Mincey Marble Customer Service at 800.533.1806.**